



## INSTALLATION INSTRUCTIONS

FTS21192		CV DRIVESHAFT AND BRACKETS
1	FT20632	CV DRIVESHAFT
1	FT20630	DRIVER DIFF MOUNT
1	FT20631	PASSENGER DIFF MOUNT
1	FT20635	REAR DIFF MOUNT
1	FT90085	BUSHING KIT
1	FT21192i	INSTRUCTIONS

### 2014 GM C/K1500 4WD GEN 1 CV DRIVESHAFT KIT


FT21192i

**Fabtech Motorsports** | 4331 Eucalyptus Ave. Chino, CA 91710


**Tech Line:** 909-597-7800 | **Fax:** 909-597-7185 | **Web:** [www.fabtechmotorsports.com](http://www.fabtechmotorsports.com)

## - INSTRUCTIONS -



1. Remove the skid plate from the vehicle. Save all hardware. Remove the driveshaft. **SEE FIGURE 1**

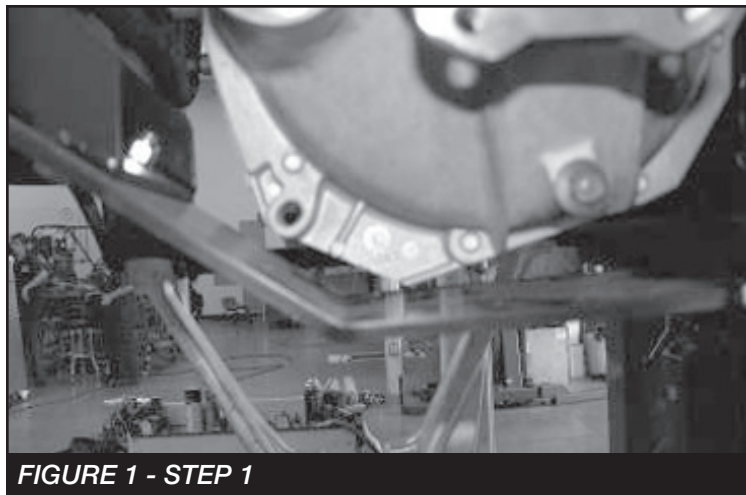


2. Remove rear diff bracket from the differential and the rear crossmember. Save hardware. **SEE FIGURE 2**

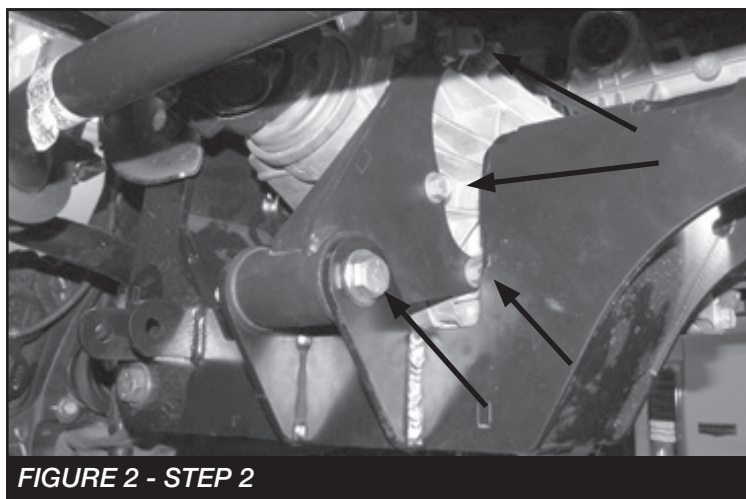

3. On the drivers side remove the differential drop bracket and replace with the supplied Part # 1. Leave hardware loose. On the Passenger side remove the differential drop bracket and replace with the supplied Part # 2 **Note the direction of the drop bracket.** Leave the hardware loose at this time. **SEE FIGURES 3-4**

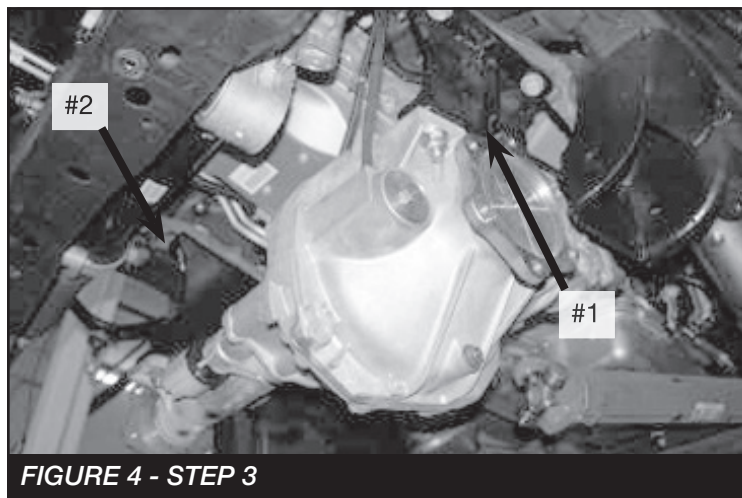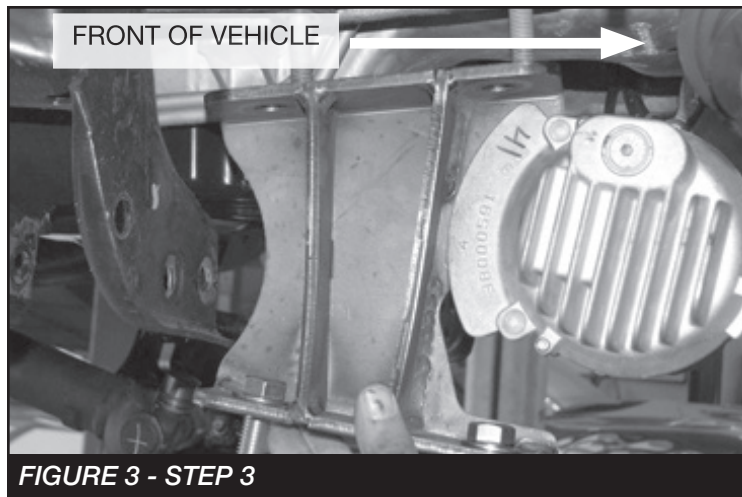

4. Install the new rear diff support bracket (Part #3) Leave loose. **SEE FIGURE 4**

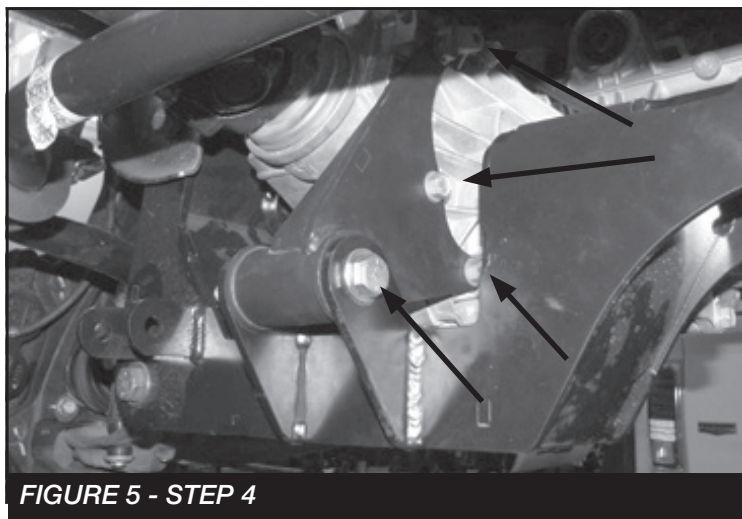

5. Torque all of the differential hardware to spec. Install the new CV driveshaft. Reinstall the skid plate with the hardware removed in step 1. Torque 1/2" skid plate hardware to 75 ft-lbs., and the 7/16" to 50 ft-lbs.