



INSTALLATION INSTRUCTIONS



2013-2018 DODGE 3500 4WD 7" 4-LINK KIT W/ 4.0 COILOVERS

FTS23191

Fabtech Motorsports | 4331 Eucalyptus Ave. Chino, CA 91710

Tech Line: 909-597-7800 | **Fax:** 909-597-7185 | **Web:** www.fabtechmotorsports.com

K3080DL		
1	FTS23190	COMPONENT BOX 1
1	FTS23191	COMPONENT BOX 2
2	FTS835122	4.0 DLSS COILOVER W/ RESI

FTS23190 COMPONENT BOX 1		
1	FT44043	SWAY BAR DROP (DRIVER)
1	FT44044	SWAY BAR DROP (PASSENGER)
1	FT44172	DODGE PITMAN ARM
1	FT44311BK	UPPER COIL OVER MOUNT (DRIVER)
1	FT44312BK	UPPER COIL OVER MOUNT (PASSENGER)
1	FT44314	ABS RELOCATION BRACKET (DRIVER)
1	FT44315BK	TRACK BAR BRACKET
1	FT44390BK	RESI MOUNT (DRIVER)
1	FT44391BK	RESI MOUNT (PASSENGER)
1	FT44394BK	UPPER BACKING PLATE (DRIVER)
1	FT44395BK	UPPER BACKING PLATE (PASSENGER)
1	FT44402BK	BUMP STOP MOUNT (DRIVER)
1	FT44403BK	BUMP STOP MOUNT (PASS)
2	FT44412BK	REAR BUMP STOP SPACER
1	FT44424	HARDWARE SUBASSEMBLY
2	FT811192	2.25 DLSS N/R
1	FTS419	DRIVESHAFT SHIM KIT

FTS23191 COMPONENT BOX 2		
1	FT44300BK	4 LINK BRACKET (DRIVER)
1	FT44301BK	4 LINK BRACKET (PASSENGER)
1	FT44303BK	4 LINK UPPER DRIVER
1	FT44304BK	4 LINK UPPER PASSENGER
1	FT44305BK	4 LINK LOWER DRIVER
1	FT44306BK	4 LINK LOWER PASSENGER
2	FT44318BK	CROSS MEMBER BACK PLATE
1	FT44438	HARDWARE SUBASSEMBLY
1	FT44439	HARDWARE KIT
4	FT748U	UBOLT RD 9/16-18 X 15.00 X 4.00
2	FTBK4	BLOCK 4"

FT44424 HARDWARE SUBASSEMBLY		
1	FT44381	LOWER SHOCK MOUNT TAB DRIVER OUTER
1	FT44382	LOWER SHOCK MOUNT TAB DRIVER INNER
1	FT44383	LOWER SHOCK MOUNT TAB PASS OUTER
1	FT44384	LOWER SHOCK MOUNT TAB PASS INNER
1	FT44385	LOWER SHOCK MOUNT SPACER TOOL
1	FT44386	LOWER SHOCK GUSSET TOP DRIVER
1	FT44387	LOWER SHOCK GUSSET TOP PASS

FT44439 - HARDWARE KIT		LOCATION
	BAG 1	
1	M18-2.5 X 90MM HEX BOLT	TRACK BAR DROP BRACKET
2	M18 WASHERS	
1	NUT C-LOCK 18MM G10.9 ZINC	
2	1/2-13 X 1-1/2 HEX BOLT G8 ZINC	TRACK BAR BRACKET
8	1/2" WASHERS	
4	1/2 -13 C-LOCK NUT ZINC	
2	1/2-13 1-1/4 HEX BOLT ZINC	BUMP STOP
2	5/16-18 X 2-1/2 HEX BOLT ZINC	
4	5/16 SAE WASHER G8 ZINC	
2	5/16-18 C-LOCK NUT ZINC	
4	1/4-20 X 1 HEX BOLT G5 ZINC	BRAKE LINE EXTENSION
2	1/4 SAE WASHER G5 ZINC	
2	1/4-20 C-LOCK NUT ZINC	
4	7/16-14 X 1-1/4 HEX BOLT G8	SWAY BAR DROP
8	7/16 SAE WASHER G8	
4	7/16-14 C-LOCK NUT	
	BAG 2	
10	7/16-14 X 1-1/2" HEX BOLT	
2	7/16 SPLIT LOCK WASHER	
1	7/16-14 X 1-1/4" HEX BOLT	
2	7/16" USS WASHER	
20	7/16 SAE WASHER	
9	7/16-14 C-LOCK NUT	
2	5/8-11 X 3-1/4" HEX BOLT	
6	5/8" SAE WASHER	
2	5/8-11 X 4" SOCKET HEAD BOLT	
2	5/8-11 C-LOCK NUT	
2	3/8-16 X 1-1/4" HEX BOLT	
2	3/8-16 C-LOCK NUT	
4	3/8" SAE WASHER	
2	1/4-20 X 1" HEX BOLT	
2	1/4-20 NYLOCK NUT	
4	1/4" SAE WASHER	

	BAG 3	
2	7/16-14 X 1-1/4 HEX BOLT G8 ZC	TRACK BAR/ BUMP STOP
2	7/16 SAE WASHER G8 ZINC	
2	7/16-14 C-LOCK NUT ZINC	
6	1/2 SAE WASHER G8 ZINC	
4	1/2-13 C-LOCK NUT ZINC	
4	1/2-13 X 1-1/2 HEX BOLT G8 ZNC	
8	1/2 USS WASHER G5 ZINC	SWAY BAR LINK
20	5/8" SAE WASHER	
10	5/8-11 C-LOCK NUT	
10	5/8-11 X 1-3/4" HEX BOLT	
20	3/4 SAE WASHER	
8	3/4-10 C-LOCK NUT	
2	3/4-10 1-1/4" HEX BOLT	
2	3/4-10 X 2" HEX BOLT	
4	3/4-10 X 5" HEX BOLT	
	BAG 4	
8	7/16" SAE WASHER	
4	7/16-14 C-LOCK	
4	7/16-14 X 1-1/4" HEX BOLT	
8	9/16" SAE WASHER	
8	9/16-18 NYLOCK NUT	
1	5/16-18 X 1" HEX BOLT	
2	5/16 SAE WASHER	
1	5/16-18 C-LOCK NUT	
2	M10-1.5 X 60MM HEX BOLT	
2	10MM FLAT WASHER	
2	10MM SPLIT LOCK WASHER	
2	THREAD LOCKING COMPOUND	

FT44438		HARDWARE SUBASSEMBLY
4	FT103	MISALIGNMENT SPACER CLEAR ZINC
1	FT23119i	INSTRUCTIONS
1	FT23191i	INSTRUCTIONS
1	FT30182	NUT TAB
1	FT30496	REAR BRAKE LINE BRACKET
2	FT44135	BUMP STOP MOUNT TAB
1	FT44223	NUT TAB
2	FT44245	BRAKE LINE EXT
1	FT44246	TRACK BAR SUPPORT SPACER
2	FT44258	1/4 NUT TAB
4	FT44302	MISALIGNMENT
2	FT44324	NUT TAB
1	FT50184	TRAC BAR SUPPORT NUT TAB
2	FT86021	HARDWARE & BUSHING KIT 21
4	FT89016	#64 HOSE CLAMP
1	FTAS16	DRIVER WARNING DECAL
1	FTAS12	STICKER FT BLUE 10X4
2	FTS88	BUMPSTOP 1 IN TALL LOW RND
1	FTREGCARD	REGISTRATION CARD
2	FT160	BLOCK SLEEVE



- TOOL LIST -

Required Tools (Not Included)

Basic Hand Tools
Floor Jack
Jack Stands
Assorted Metric and S.A.E sockets, and Allen wrenches
Torque Wrench
Die Grinder w/ Cutoff Wheel or Sawzall

- PRE-INSTALLATION NOTES -

For technical assistance call: **909-597-7800** or e-mail: **info@fabtechmotorsports.com**

Read this before you begin installation-

Check all parts to the parts list above before beginning installation. If any parts are missing contact Fabtech at 909-597-7800 and a replacement part will be sent to you immediately.

Read all instructions thoroughly from start to finish before beginning the installation. If these instructions are not properly followed severe frame, driveline and / or suspension damage may occur.

Check your local city and state laws prior to the installation of this system for legality. Do not install if not legal in your area.

Prior to the installation of this suspension system perform a front end alignment and record. Do not install this system if the vehicle alignment is not within factory specifications. Check for frame and suspension damage prior to installation.

The installation of this suspension system should be performed by two professional mechanics.

This suspension must be installed with Fabtech shock absorbers.

Use the provided thread locking compound on all hardware.

WARNING- Installation of this system will alter the center of gravity of the vehicle and may increase roll over as compared to stock.

Vehicles that receive oversized tires should check ball joints, uniballs, tie rods ends, pitman arm and idler arm every 2500-5000 miles for wear and replace as needed.

Verify differential fluid is at manufactures recommended level prior to kit installation. Installation of the kit will reposition the differential and the fill plug hole may be in a different position. (For example, if the manufacture recommends 3 quarts of fluid, make sure the diff has 3 quarts of fluid). Check your specific manual for correct amount of fluid.

RECOMMENDED TIRE/WHEEL SIZES -

Use 37x12.50/R17 tire w/ 17x9 wheels w/ 5" BS w/ minor trimming

Use 37x12.50/R18 tire w/ 18x9 wheels w/ 5" BS w/ minor trimming

Use 37x13.50/R20 tire w/ 20x9.5 wheels w/ 5" BS w/ minor trimming

Use 37x13.50/R22 tire w/ 22x9.5 wheels w/ 5" BS w/ minor trimming

- INSTRUCTIONS -

FRONT SUSPENSION

1. Disconnect the negative terminal on the battery. Jack up the front end of the truck and support the frame rails with jack stands. **NEVER WORK UNDER AN UNSUPPORTED VEHICLE!** Remove the front tires.
2. **DRIVER SIDE ONLY** - Starting on the driver side, remove the driver side fender liner.
3. Remove the factory shock and discard. Retain factory lower hardware.
4. Disconnect factory sway bar links.
5. Remove factory coil spring and rubber isolator. Retain these parts for later use.
6. Remove the factory pitman arm and discard. Keep hardware.
7. Locate the new FT44172 Fabtech pitman arm and install. Do not reconnect the factory drag link at this time. Reinstall the factory lock washer plus thread locker. Torque to 220ft-lbs.
8. Un-thread the factory drag link at the adjuster sleeve and remove adjuster sleeve. **SEE FIGURE 1**

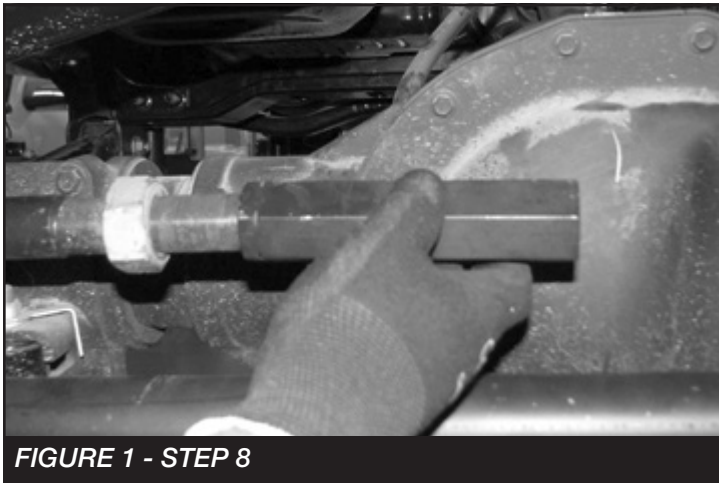


FIGURE 1 - STEP 8

9. Using a die grinder remove the flat non-threaded section from both ends of the drag link. This will allow you to rotate the drag link and line it up with the pitman arm. **SEE FIGURES 2-4**



FIGURE 2 - STEP 9



FIGURE 3 - STEP 9


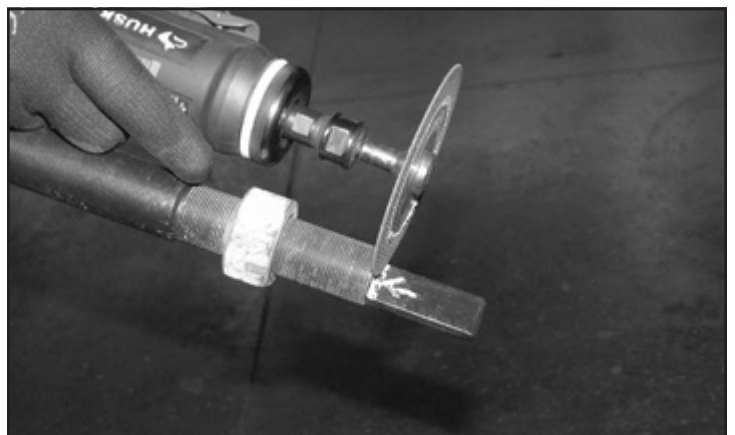


FIGURE 4 - STEP 9

10. Reassemble the drag link and connect it to the new pitman arm. **SEE FIGURE 5**



11. Torque the drag link to 83 ft-lbs.
12. Remove the track bar from the frame side of the vehicle.
13. Locate the FT44315BK track bar bracket and M18-2.5 x 90mm bolt.
14. Slide the track bar bracket into the factory mount and insert the M18 bolt into the factory pivot hole. **SEE FIGURE 6**

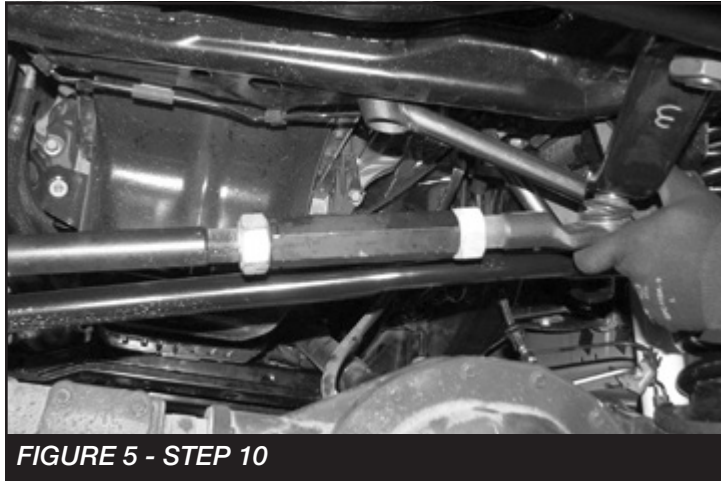


15. Rotate the bracket up until the end of the bracket is flush with the crossmember under the motor.
16. Using the Fabtech bracket as a guide, mark the factory mount for the upper driver side mounting hole.

17. Swing the bracket back out of the way. Using a 1/2" drill bit, drill out the marked hole. **SEE FIGURE 7**



18. Locate one FT44246 sleeve and two 1/2"-13 x 1-1/2" bolts, nuts and washers.
19. Rotate the track bar bracket back into place and bolt together using 1/2"-13 x 1-1/2" bolt and the sleeve. **SEE FIGURES 8-9**

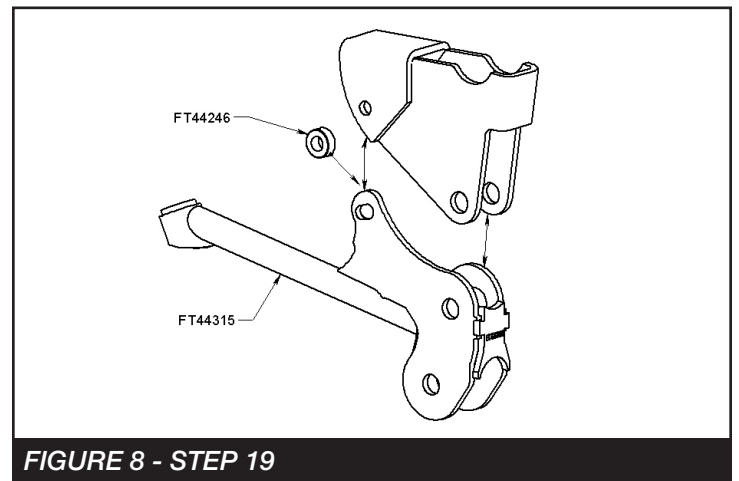

20. Using the Fabtech bracket as a guide, drill a 1/2" hole in the cross member under the motor. Next, mount using 1/2"-13 x 1.5" and washer. **SEE FIGURE 10**

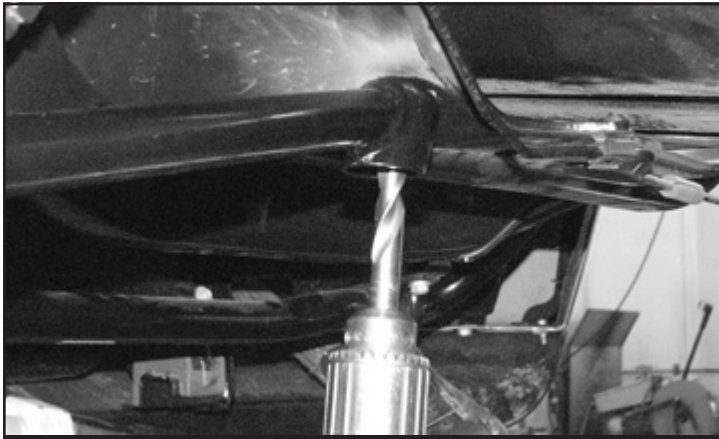


FIGURE 10 - STEP 20

21. Remove the factory coil springs and lower rubber isolators. **SEE FIGURE 11**



FIGURE 11 - STEP 21

- **WHEN INSTALLING DIRT LOGIC 4.0 COILOVERS REFER TO THE COILOVER CONVERSION INSTRUCTIONS AT THIS TIME.**

22. Locate and remove the factory rubber bump stop. **SEE FIGURE 12**

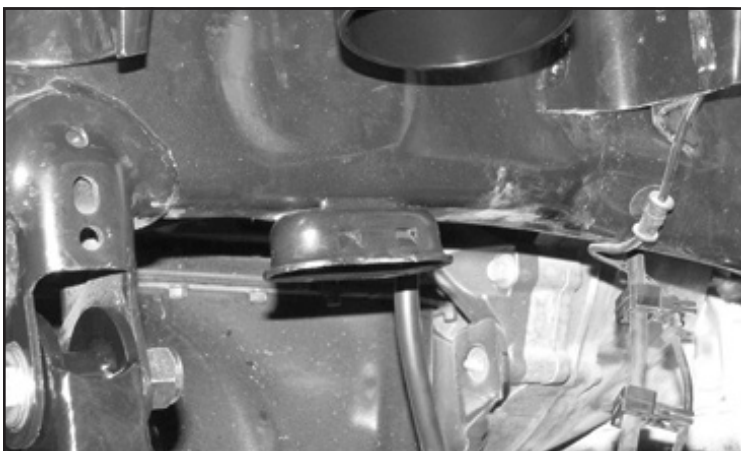


FIGURE 12 - STEP 22

23. Using a die grinder, grind out the stamped in tabs on the inside of the bump stop housing. **SEE FIGURES 13-14**

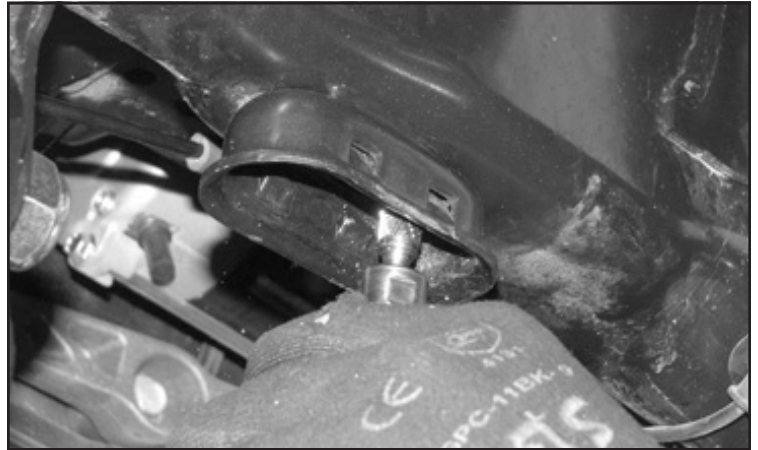



FIGURE 13 - STEP 23





FIGURE 14 - STEP 23

24. Locate the FT44402BK driver front bump stop and the FT44135 nut tab.

25. Using a 1/2" drill bit, drill out the hole in the factory crossmember inline with the factory bump stop mount. **SEE FIGURE 15**

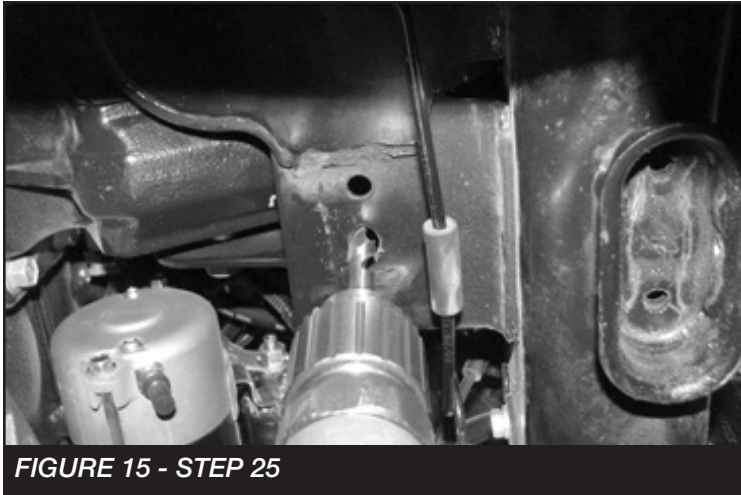

26. Slide the bump stop into the factory bump stop mount. Using a 1/2"-13 x 1-1/4" bolt and the FT44135 (nut tab), bolt the bump stop to the crossmember. Torque the 1/2" bolt to 90 ft-lbs. **SEE FIGURES 16-18** Using the outer tab on the bump stop as a drill guide, drill a 5/16" hole all the way through the factory bump stop mount. **SEE FIGURE 19**

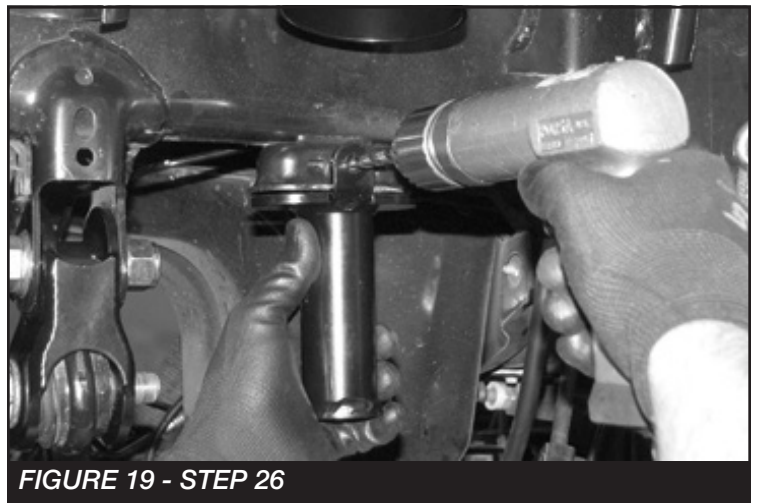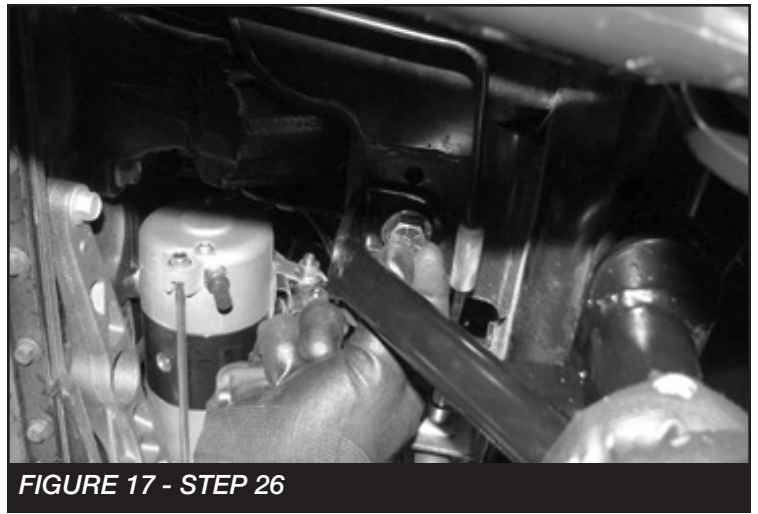

27. Locate a 5/16"-18 x 2-1/2" bolt, nut and washers. Using this bolt, secure the bump stop to the factory bump stop mount and torque to 29 ft-lbs. **SEE FIGURE 20**

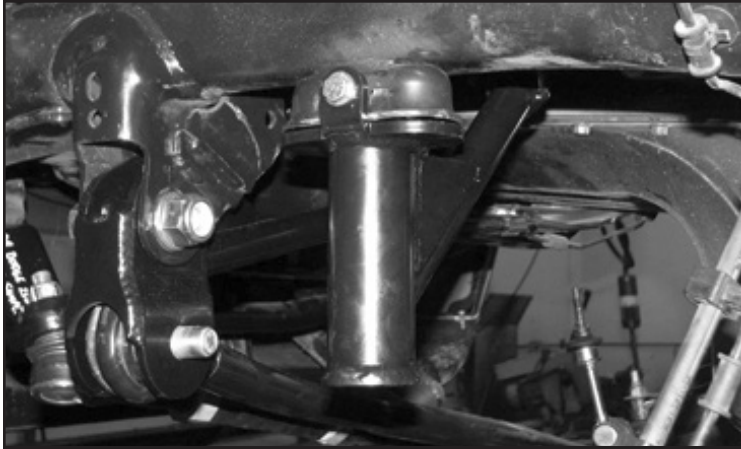


FIGURE 20 - STEP 27

28. Locate the FTS88 bump stop pad and thread it into the bottom of the Fabtech bump stop. **SEE FIGURE 21**

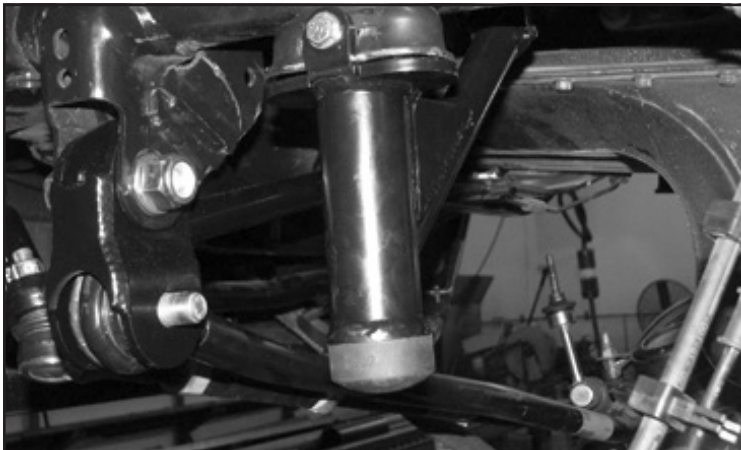


FIGURE 21 - STEP 28

29. Repeat steps 22-28 on the passenger side.

30. Secure the front diff. Remove the factory driver and passenger side Radius arm. Retain Hardware. **SEE FIGURES 22-23**

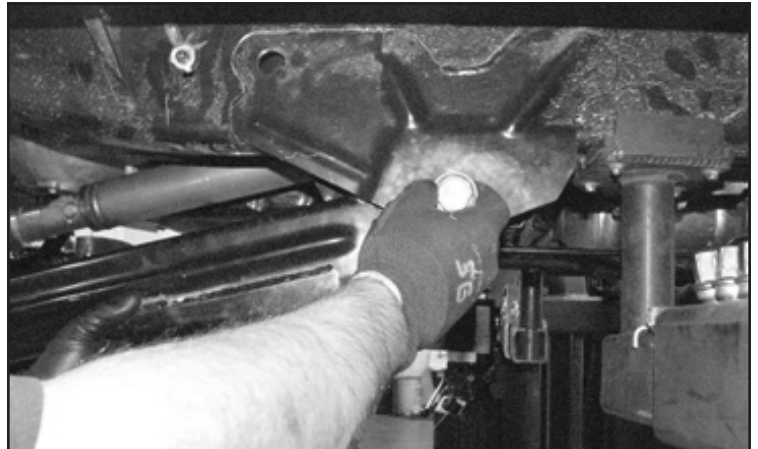


FIGURE 22 - STEP 30

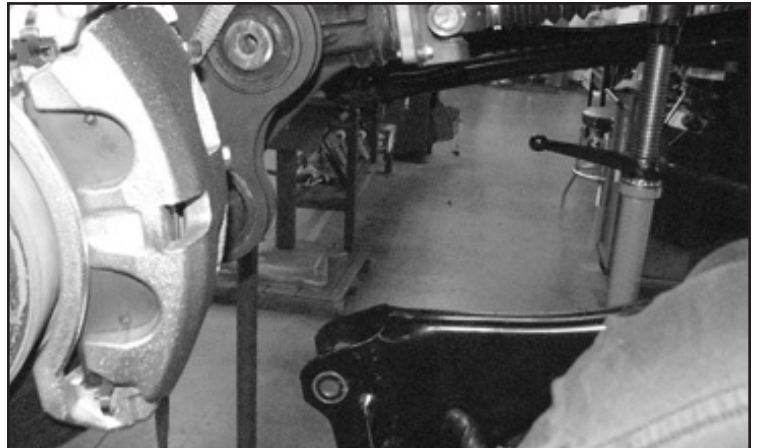



FIGURE 23 - STEP 30

NOTE: SUPPORT THE TRANSFER CASE AT THIS TIME


31. Remove the factory crossmember and skid plate that is mounted between the factory radius arm pockets. Retain Hardware. **SEE FIGURES 24-26**



32. **NOTE: Trim a 2" radius off the inner front radius arm bracket. SEE FIGURE 27**

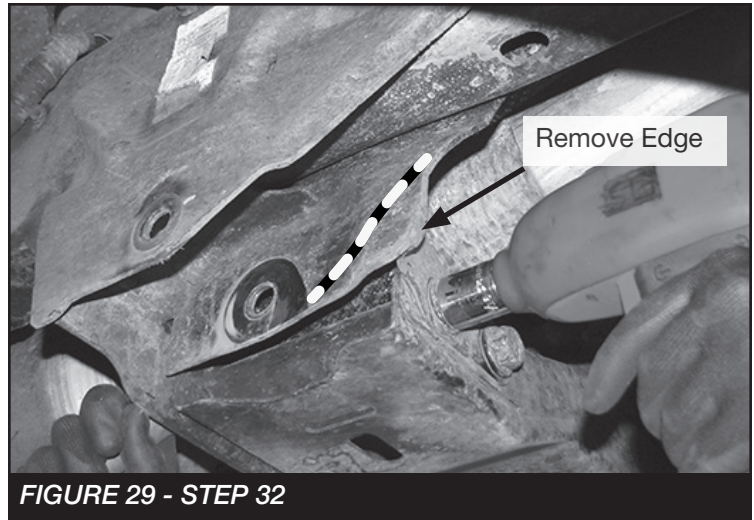

33. Once the crossmember is out. The inner support sleeve will need to be cut out on both sides. **SEE FIGURES 27-28**

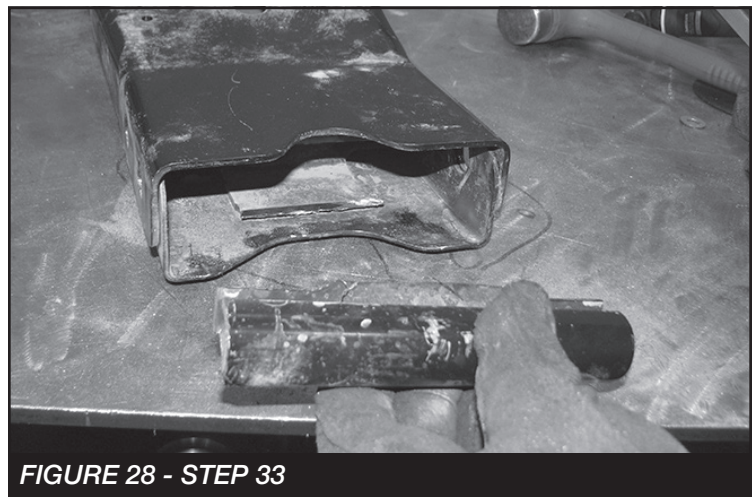

34. Locate and cut out the 4-Link templates on the last pages.

35. Starting on the driver side top of the crossmember. Place the correct template on the crossmember so the edge of the template lines up to the factory edge on the crossmember. Mark for cutting. Do the same with the Driver side bottom. Follow the mark around the side and connect with the mark on the top. **SEE FIGURES 30-31**



FIGURE 30 - STEP 35



FIGURE 31 - STEP 35

36. Carefully cut the crossmember where you made the marks. Sand to a smooth edge. **FIGURE 32** shows what the driver side should look like when complete.



FIGURE 32 - STEP 36

37. Moving to the passenger side of crossmember. Place the cut out templates on the crossmember and mark for cutting. **SEE FIGURES 33-34**



FIGURE 33 - STEP 37



FIGURE 34 - STEP 37

38. Carefully cut the crossmember where you made the marks. Sand to a smooth edge. **FIGURE 35** shows what the passenger side should look like when complete.



FIGURE 35 - STEP 38

39. Locate the factory driver side crossmember frame mount. On the front side only trim 1/2" off the bottom like shown. **SEE FIGURES 36-37**

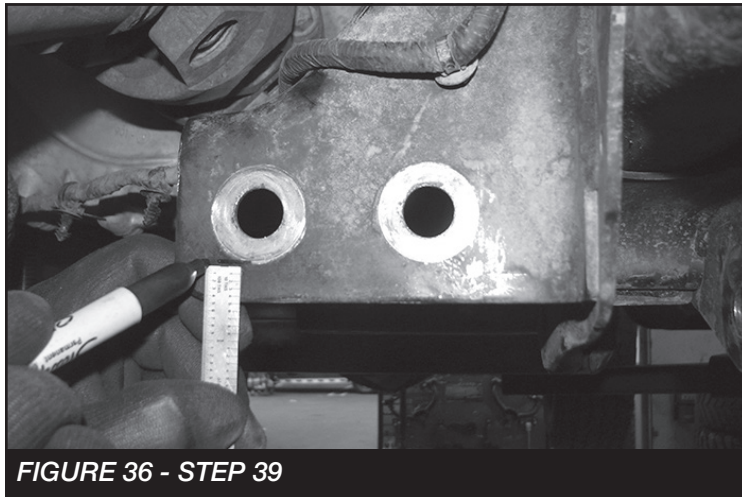


FIGURE 36 - STEP 39

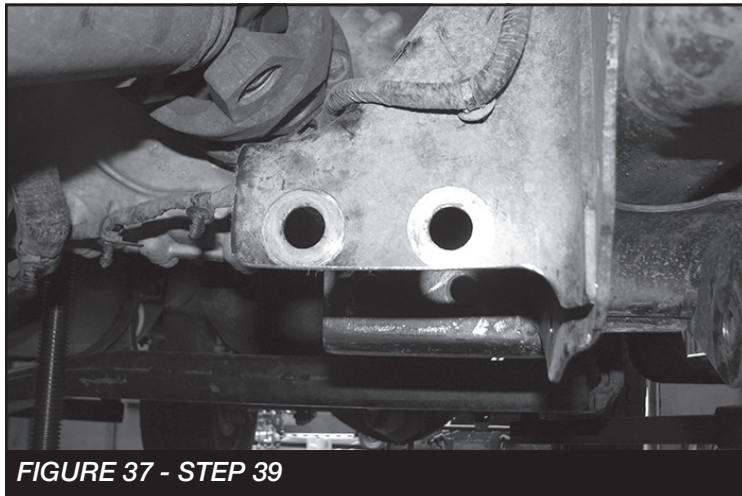


FIGURE 37 - STEP 39

40. Locate FT44300BK (4-Link Driver Bracket), starting on the driver side. Install the bracket like shown below using the 5/8"x 1-3/4" hardware and 3/4"x 1-1/4" hardware from Bag 5 in the hardware kit. Leave loose. **SEE FIGURES 38-39**

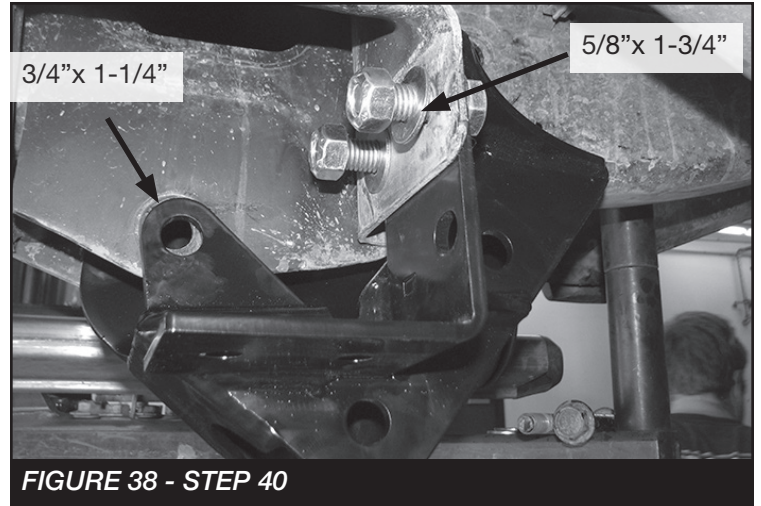


FIGURE 38 - STEP 40

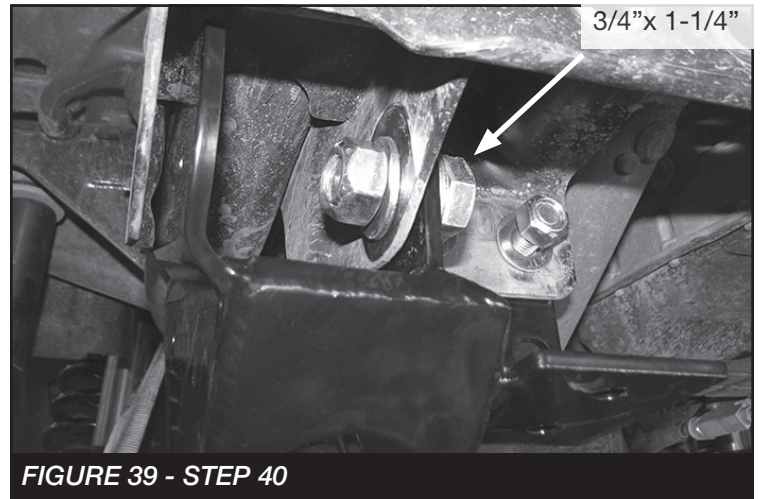


FIGURE 39 - STEP 40

41. From Bag 3, Locate the 3/4"-10 X 2" Bolt, 4 washers and nut. **NOTE: When installing the 3/4" bolt insert 2 washers between the factory bracket and the new Fabtech 4-link bracket.** Leave loose. **SEE FIGURE 40**

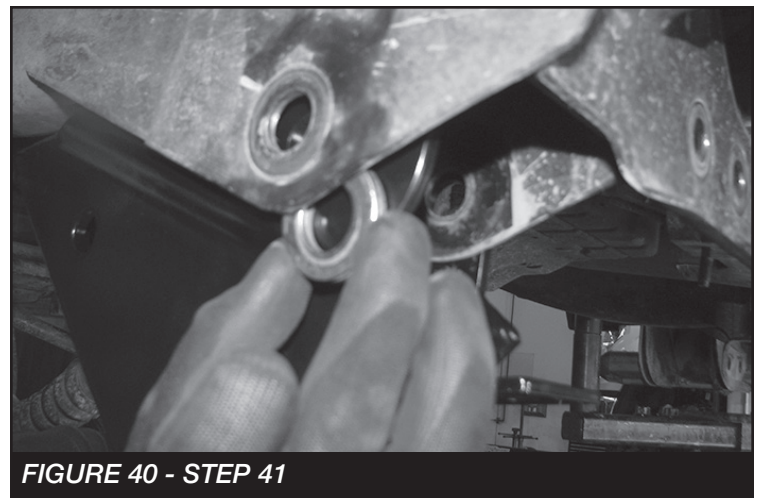


FIGURE 40 - STEP 41

42. Locate FT44324 (Nut Tab) and 7/16" X 1-3/4" bolt and washers. Insert the nut tab through the hole on the frame and install the 7/16" bolt and washers. Torque to 83 ft-lbs. Torque the hardware installed on the previous steps to the below specifications. **SEE FIGURES 41**



FIGURE 41 - STEP 42

- 5/8" - 254 ft-lbs
- 3/4" - 450 ft-lbs
- **REPEAT STEPS 39-42 ON PASSENGER SIDE**

43. Locate FT44318BK (Crossmember Back Plate) and 5/8" Hardware. Install the factory crossmember like shown in **FIGURES 42-44** using the FT44318BK bracket, 5/8" hardware and 1 of the factory bolts. Torque to 254 ft-lbs.

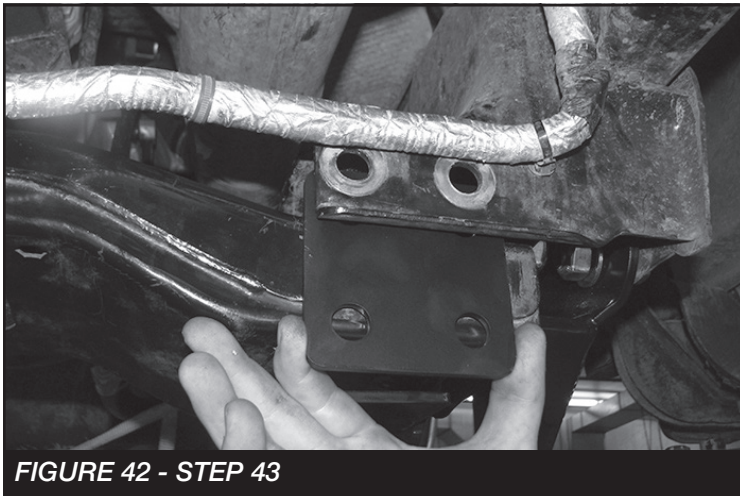


FIGURE 42 - STEP 43

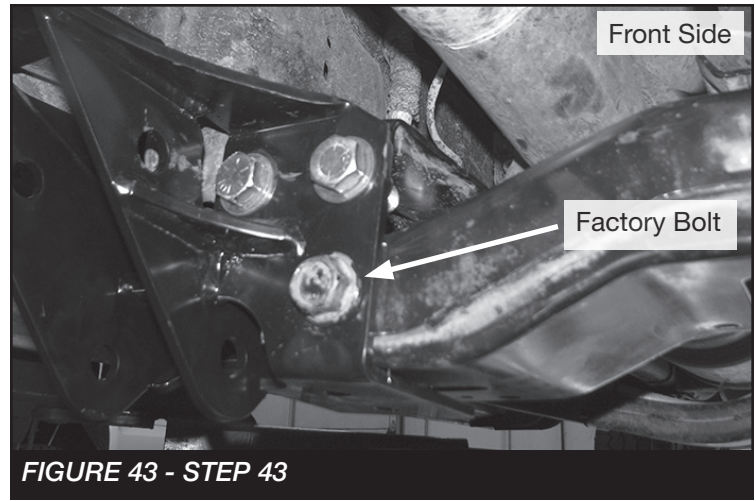


FIGURE 43 - STEP 43



FIGURE 44 - STEP 43

44. Using a 17/32" drill bit. Drill 4 total holes, 2 on the driver side and 2 on the passenger side through the crossmember using the holes in the brackets as guides. **SEE FIGURE 45**

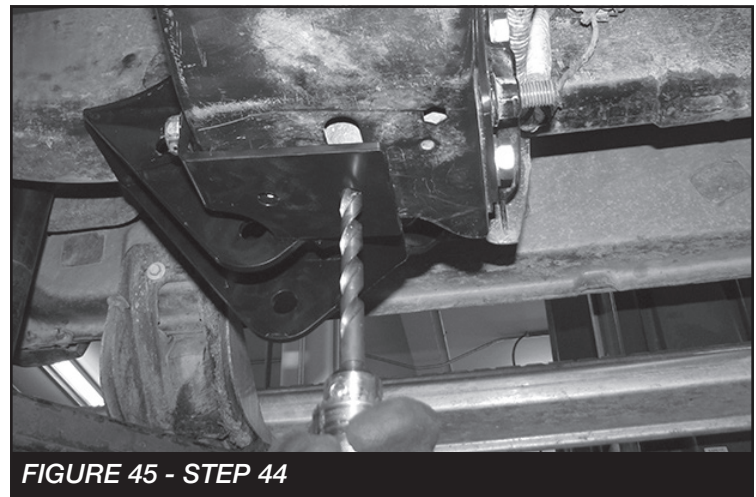


FIGURE 45 - STEP 44

45. Starting with the driver side locate FT44223 (nut tab) (2) 1/2-13 X 1-1/2", washers and (1) 1/2" C-lock nut. **NOTE: The nut tab will be used towards the front of the vehicle.** Torque to 90 ft-lbs. **SEE FIGURE 46**



FIGURE 46 - STEP 45

46. Next for the passenger side locate FT30182 (nut tab) (2) 1/2-13 X 1-1/2", washers and (1) 1/2" C-lock nut. Toque to 90 ft-lbs. **SEE FIGURE 47**



FIGURE 47 - STEP 46

47. Locate and install FT44302 (Outer misalignment spacer) and FT103 (Inner misalignment spacer) onto the new 4-link arms. Install the new arms with the provided 3/4" x 5" bolts and hardware. Re-use the factory hardware for the axle side. Torque to 317 ft-lbs. **SEE FIGURES 48-50**

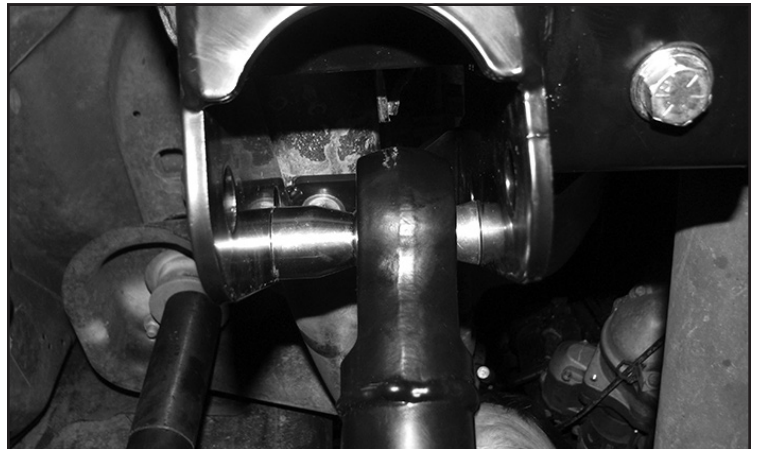


FIGURE 48 - STEP 47



FIGURE 49 - STEP 47



FIGURE 50 - STEP 47

48. Locate the factory rear crossmember. Remove and discard the exhaust rubber isolator and bracket from the crossmember. Next, with assistance remove the 6 bolts that holds the crossmember on the frame and lower the crossmember to the bottom factory holes. **NOTE: Only 3 bolts will be used to re-attach the crossmember. SEE FIGURE 51-52**



FIGURE 51 - STEP 48



FIGURE 52 - STEP 48

49. Locate the FT44245 Brake line extension, FT44258 nut tab and two 1/4"-20 x 1" bolts. Attach the brake line extension to the axle using one bolt and the nut tab. Attach the factory brake line bracket to the Fabtech extension. Torque to 10 ft-lbs. Repeat this step on the passenger side. **SEE FIGURES 53**

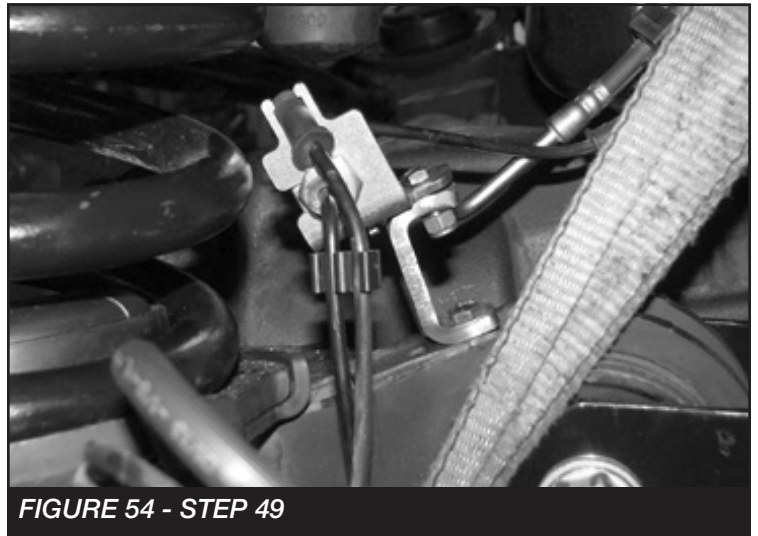


FIGURE 54 - STEP 49

50. Locate and install the new sway bar drop brackets using the supplied 7/16" hardware FT44043 (Driver) and FT44044 (Passenger). Torque to 29 ft-lbs. **SEE FIGURE 53**

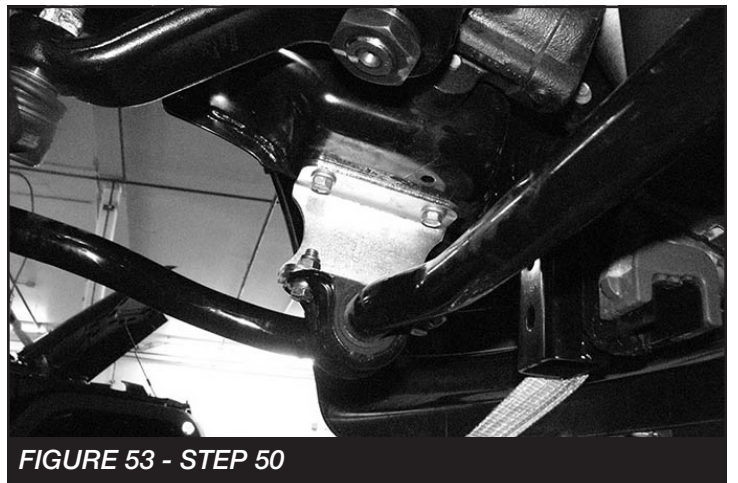



FIGURE 53 - STEP 50

- REAR SUSPENSION

51. Jack up the rear end of the vehicle and support the frame rails with jack stands and remove wheels and tires. Remove the rear driver and passenger inner fender liners. **SEE FIGURE 55**




52. Supporting the rear differential, remove and discard the rear shocks and u-bolts. Lower the axle down slowly. Use care not to over extend the brake hoses. **SEE FIGURES 56-57**

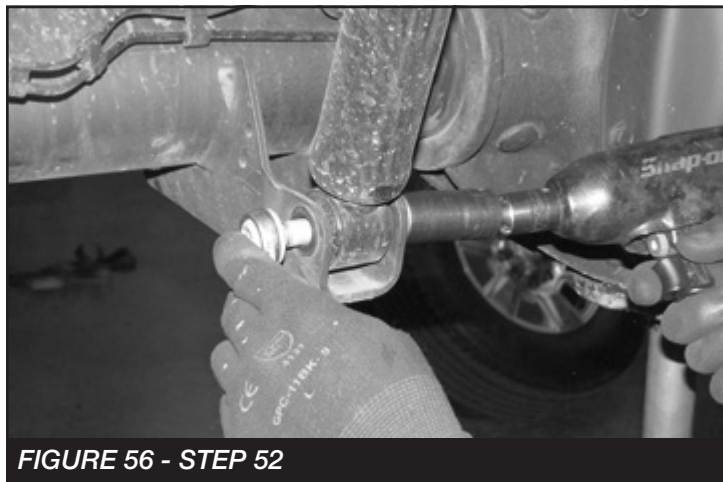

53. Locate FTBK4 (4" Block) and FT160 (Block pin sleeve). Using a drill and 3/4" bit. Drill out the centering pin hole on the block. Next, install the FT160 Sleeve onto the centering pin. **SEE FIGURES 58-59**



54. Install the new blocks onto the axle with the small end of the taper to the front of the truck. Using the supplied u-bolts, nuts and washers, align axle, lift block and springs and torque to u-bolts to 129 ft-lbs. **SEE FIGURE 60**

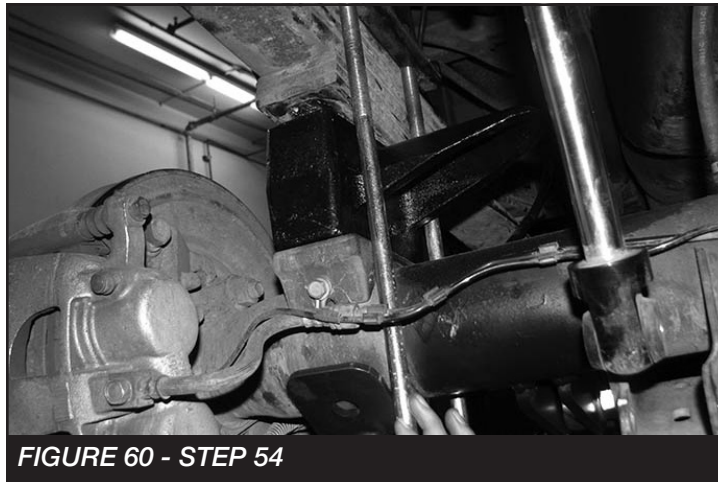

55. Install new Dirt Logic 2.25" (FTS811192) with the factory hardware and torque upper and lower bolts to 83 ft-lbs.
56. Locate the FT44412BK bump stop extension. Remove driver and passenger factory bump stop. Retain Hardware.
57. Install the bump stop extension to the factory mount using the factory hardware and torque to 65 ft-lbs. Using 7/16"-14 x 1-1/4" bolt, nuts and washers, mount the factory bump stop to the extension. Torque to 59 ft-lbs.
SEE FIGURE 67

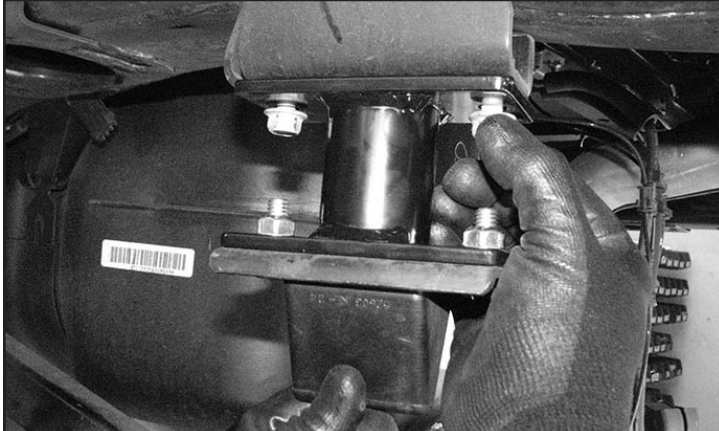


FIGURE 61 - STEP 61

58. Locate FT30496 (Rear Brake Line bracket) Remove the hardware off the factory bracket and install the FT30496 using the factory and supplied 5/16" hardware. Torque to 21 ft-lbs. **SEE FIGURE 68**



FIGURE 62 - STEP 62

59. Re-Install both front and rear inner fender liners.
60. Install tires and wheels and torque lug nuts to wheel manufacturer's specifications. Turn front tires left to right and check for appropriate tire clearance. **Note - Some oversized tires may require trimming of the front bumper & valance.**

61. Check front end alignment and set to factory specifications. Readjust headlights. Recheck all bolts for proper torque.
62. Recheck brake hoses, ABS wires and suspension parts for proper tire clearance while turning tires fully left to right.
63. Install Driver Warning Decal. Complete product registration card and mail to Fabtech in order to receive future safety and technical bulletins on this suspension.

Vehicles that will receive oversized tires should check ball joints, uniballs and all steering components every 2500-5000 miles for wear and replace as required.

RE-TORQUE ALL NUTS, BOLTS AND LUGS AFTER 50 MILES AND PERIODICALLY THEREAFTER.

For technical assistance call: **909-597-7800**

- Product Warranty and Warnings -

Fabtech provides a Limited Lifetime Warranty to the original retail purchaser who owns the vehicle, on which the product was originally installed, for defects in workmanship and materials.

The Limited Lifetime Warranty excludes the following Fabtech items; bushings, bump stops, ball joints, tie rod ends, limiting straps, cross shafts, heim joints and driveshafts. These parts are subject to wear and are not considered defective when worn. They are warranted for 60 days from the date of purchase for defects in workmanship.

Dirt Logic and Performance Coilover take apart shocks are considered a serviceable shock with a one year warranty on leakage only. Service seal kits are available separately for future maintenance. All other shocks are covered under our Limited Lifetime Warranty.

Fabtech does not warrant any product for finish, alterations, modifications and/or installation contrary to Fabtech's instructions. Alterations to the finish of the parts including but not limited to painting, powder coating, plating and/or welding will void all warranties. Some finish damage may occur to parts during shipping, which is considered normal and is not covered under warranty.

Fabtech products are not designed nor intended to be installed on vehicles used in race applications or for racing purposes or for similar activities. (A "RACE" is defined as any contest between two or more vehicles, or any contest of one or more vehicle against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America.

Installation of most suspension products will raise the center of gravity of the vehicle and will cause the vehicle to handle differently than stock. It may increase the vehicle's susceptibility to a rollover, on road and off road, at all speeds. Extreme care should be taken to operate the vehicle safely at all times to prevent rollover or loss of control resulting in serious injury or death. Fabtech front end Desert Guards may impair the deployment or operation of vehicles equipped with supplemental restraining systems/air bag systems and should not be installed if the vehicle is equipped as so.

Fabtech makes every effort to ensure suspension product compatibility with all vehicles listed on the website, but due to unknown auto manufacturer's production changes and/or inconsistencies by the auto manufacturer, Fabtech cannot be responsible for 100% compatibility, including the fitment of tire and wheel sizes listed. The Tire and Wheel sizes listed in Fabtech's website are only a guideline for street driving with noted fender trimming. Fabtech is not responsible for damages to the vehicle's body or tires. Fabtech is not responsible for premature wear of factory components due to the installation of oversized tires and wheels.

Fabtech's obligation under this warranty is limited to the repair or replacement, at Fabtech option, of the defective product only. All costs of removal, installation or re-installation, freight charges, incidental or consequential damages are expressly excluded from this warranty. Fabtech is not responsible for damages and/or warranty of other vehicle parts related or non related to the installed Fabtech product. This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been subject to accident, negligence, alteration, abuse or misuse as determined by Fabtech.

Fabtech suspension components must be installed as a complete system including shocks as shown on our website. All warranties will become void if Fabtech parts are combined and/or substituted with other aftermarket suspension products. Combination and/or substitution of other aftermarket suspension parts may cause premature wear and/or product failure resulting in an accident causing injury or death. Fabtech does not warrant products not manufactured by Fabtech.

Depending on the condition of the factory suspension components retained after the installation of a Fabtech suspension not all vehicles may have the same ride stance front to rear as described in the website. The blue color of suspension components shown in all Fabtech photographs are for display purposes only. Majority of all Fabtech components will be black specifically where noted with part numbers ending in BK.



Installation of Fabtech product may void the vehicles factory warranty; it is the consumer's responsibility to check with their local vehicle's dealer for warranty disposition before the installation of the product. Some state laws may prohibit modification of suspension to a vehicle in whole or in part. It is the responsibility of the installer and consumer to consult local laws prior to the installation of any Fabtech suspension product to comply with such written laws.

It is the responsibility of the distributor and/or the retailer to review all warranties and warnings of Fabtech products with the consumer prior to purchase.

Fabtech reserves the right to super cede, discontinue, change the design, finish, part number and/or application of parts when deemed necessary without written notice. Fabtech is not responsible for misprints or typographical errors within the website or price sheet. For the most recent Product Warranty and Warnings visit our website www.fabtechmotorsports.com

4-LINK TEMPLATE

PRINT AT 100% - DO NOT SCALE TO PAGE

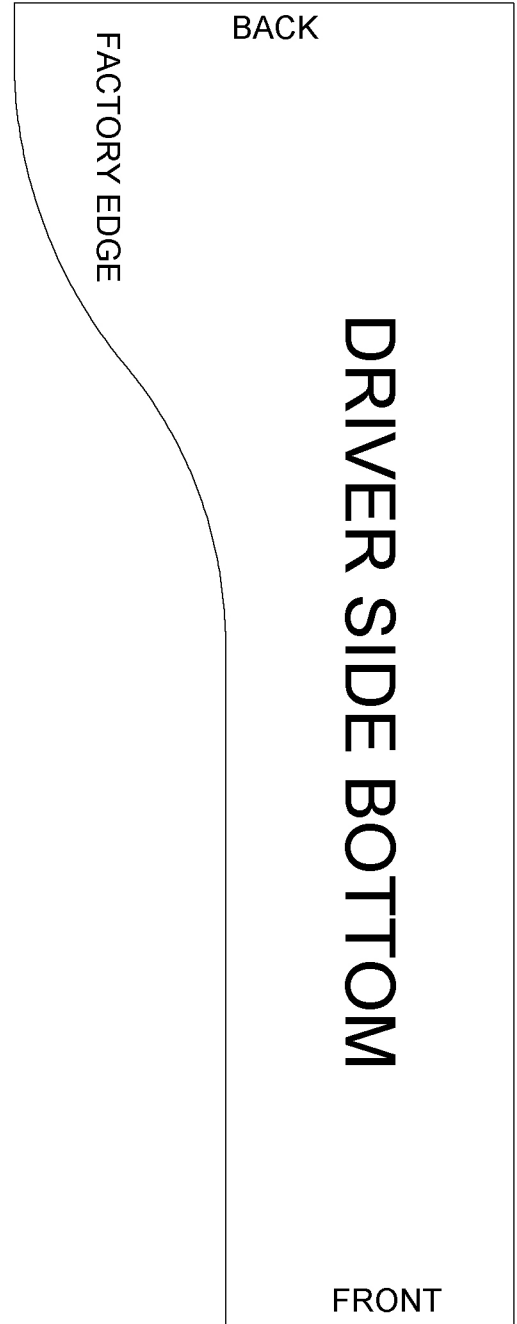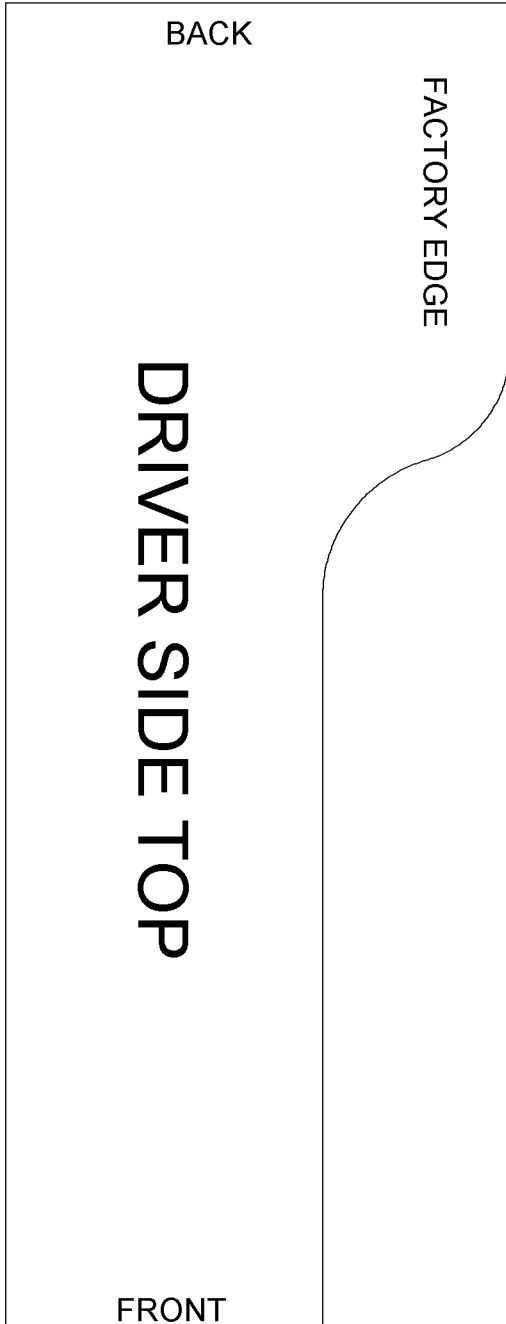

4-LINK TEMPLATE

PRINT AT 100% - DO NOT SCALE TO PAGE

